



Jeep Wrangler TJ SUN TOP

Installation Guidelines

For: 1997-2006 Jeep Wrangler TJ Sun Tops

PN: 10-40-TJS

!!STOP!! Before proceeding make sure the upper door is the correct item for the vehicle you are installing it on.
DO NOT INSTALL THIS ITEM ON ANY VEHICLE OTHER THAN ONE LISTED ABOVE

The material may have contracted, depending on at what temperature it has been stored. It is highly recommended that you remove the upper doors from the box; lay it out flat at a temperature above 72F and let it relax for at least 24 hours. As well the installation should be done only in an environment where the air temp is above 72F.

To avoid improper installation of this item it is imperative that you read and follow these guidelines completely. Failure to install the upper door skins correctly may result in a dangerous situation for the vehicle occupants as well as other motorists.

SIERRA OFFROAD TAKES NO RESPONSIBILITY FOR THE ACCURACY OR COMPLETENESS OF THESE INSTALLATION GUIDELINES. THEY ARE PROVIDED ONLY FOR INFORMATION PURPOSES. IT IS THE SOLE RESPONSIBILITY OF THE INSTALLER TO ENSURE THAT THE INSTALLTION HAS BEEN PERFORMED CORRECTLY, THERE ARE NO LOOSE OR MISSING PARTS AND THE VEHICLE HAS BEEN ROAD TESTED AFTER INSTALLATION OF THE REPLACEMENT TOP AND DEEMED SAFE TO OPERATE.

PARTS LIST

Fabric Sun Top Qty 1

TOOLS REQUIRED

None



THESE UPPER DOORS ARE INTENDED TO BE FIT OVER THE FACTORY ORIGINAL HARDWARE AND FRAME. IF THE FRAME IS DAMAGED OR MISSING PARTS DO NOT ATTEMPT THIS INSTALLATION BEFORE REPAIRS ARE MADE TO THE VEHICLE.

It is important to read the complete instruction guideline manual BEFORE beginning the installation of your new replacement upper doors. This will familiarize you with all aspects of the installation and help to avoid mistakes. It will be helpful if you keep this guideline manual for future reference.

SIERRA OFFROAD
FACTORY REPLACEMENT JEEP SOFT TOPS

1997-2006 Jeep Wrangler TJ SUN TOP Installation



1

Check Your Windshield Channel

Wrangler must have the Windshield Channel Header to install the SunTop.



2

Position Windshield Channel Header

Position the Windshield Channel Header on top of the soft top latches and use an adjustable wrench to secure them onto the windshield.

1997-2006 Jeep Wrangler TJ SUN TOP Installation

Unscrew the two round support pins to remove the door surrounds from vehicle.



Remove Door Surrounds

3

Position the Bikini Top over the roll bars and insert the front edge plastic retainer into the windshield channel.



Insert Rear Center Strap

4

1997-2006 Jeep Wrangler TJ SUN TOP Installation



5 Guide Rear Center Strap

Stretch back the rear edge of the Sun Top over the roll bars, run the rear center strap behind the roll bar and forward to the windshield's support bracket.




6 Guide Rear Center Strap through buckle

Run the rear center strap end through the buckle and pull to secure in position.

1997-2006 Jeep Wrangler TJ SUN TOP Installation


Position the rear corners of the Sun Top over the roll bar, run the longer corner strap end from under the roll bar to the buckle to secure.

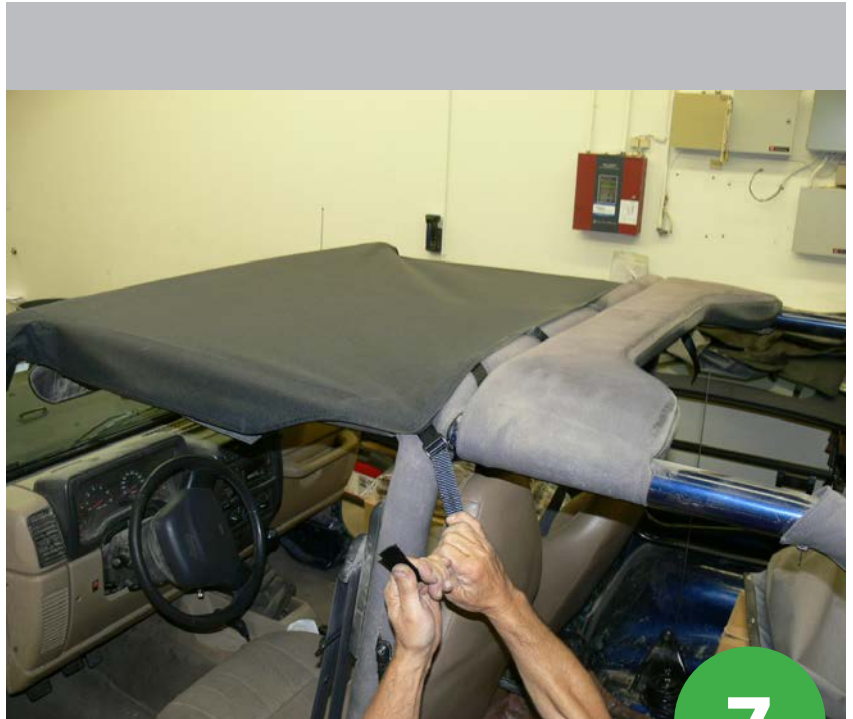

Position over Roll Bar

7

Position the rear center straps (with buckle end) over and down the roll bar, run the longer strap ends from under the roll bar to the buckle to secure.

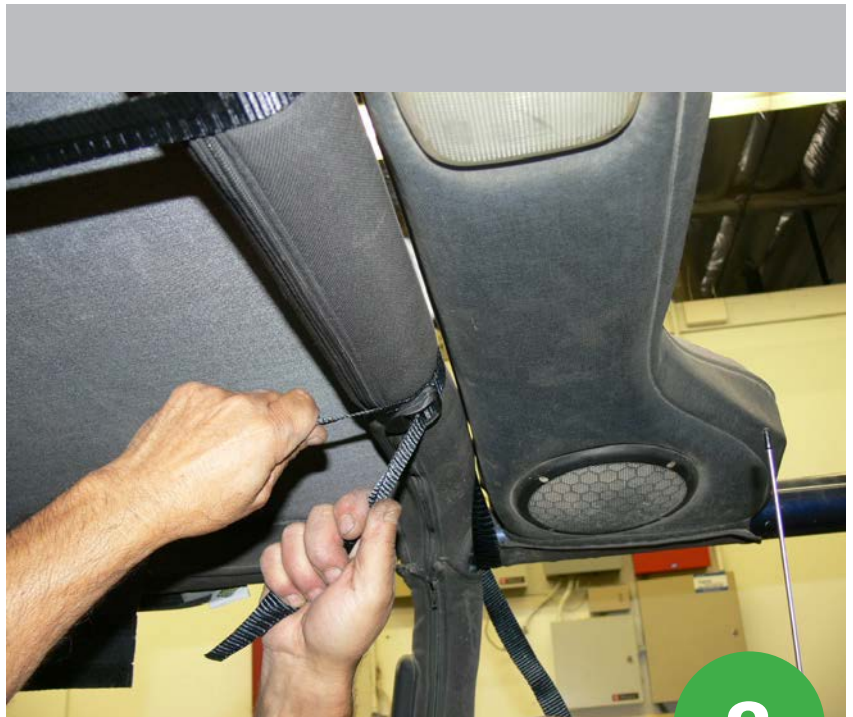

Position Center Straps

8

1997-2006 Jeep Wrangler TJ SUN TOP Installation



9

Wrap Side Support Straps

Wrap the side support flaps around the roll bars and attach the Velcro edges to secure.



Wrap and connect the two front corner Velcro straps around the roll bar to secure.

CARE AND MAINTENANCE OF YOUR NEW SUN TOP

Wash vinyl fabric exterior only using a mild soap and a soft brush. Rinse thoroughly.